



**SAMSUNG Gear S3**

# Golf NAVI

User Guide v1.0.1

# Index

## 01

### Main

- 3 Screen description
- 4 Level Icon
- 5 Round List
- 6 Setting
- 7 Send Log

## 02

### How to select Golf Cub

- 8 Search Nearby
- 9 Search Golf Club
- 10 Saved Clubs
- 11 Continue Round

## 03


### Distance Guide

- 12 Screen description
- 13 Change Hole
- 14 Option
- 15 End Round

## 04





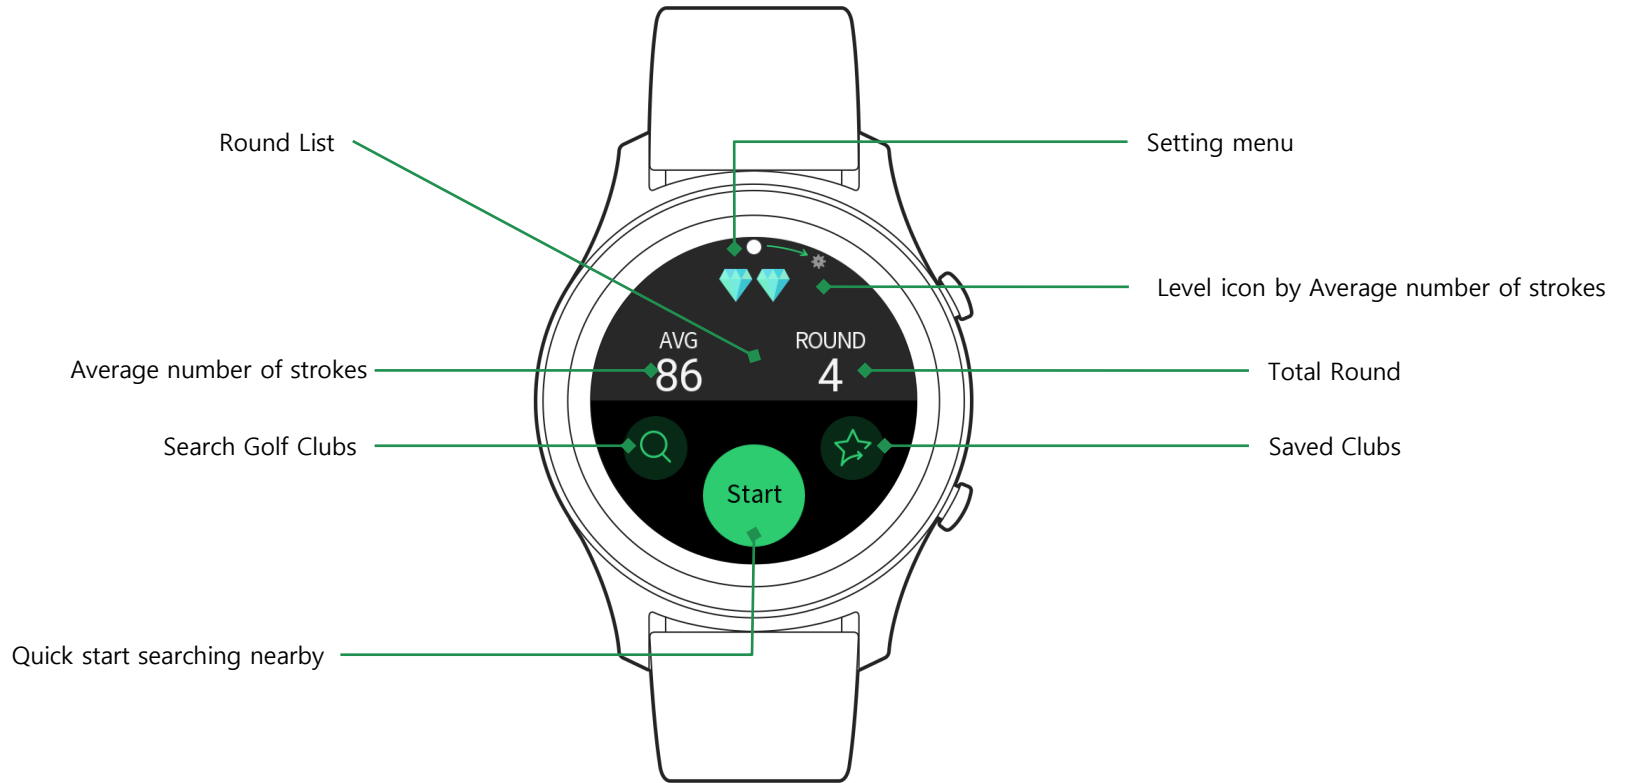





### etc.


- 16 Q & A
- 17 Company Information






An icon representing  
the average strokes level


Level Icon	AVG
	72 ~
	72~74
	75~77
	78~80
	81~83
	84~86
	87~89
	90~92
	93~95
	96 ~

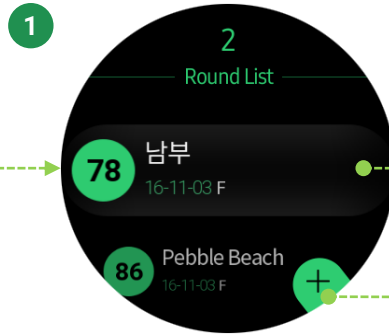


You can see the score by selecting a saved round list

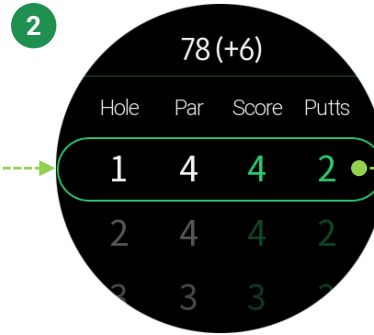

You can edit the score by touching a selected holes

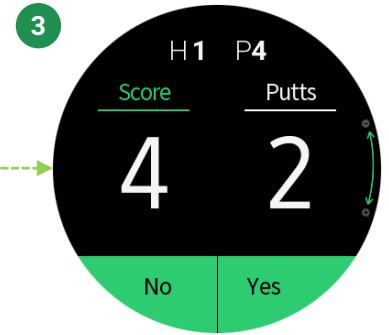

Touch the Score or Putts area and turn the bezel to edit the score you want.

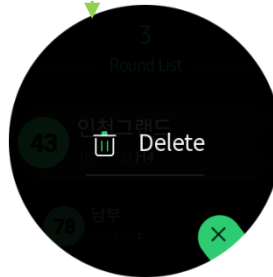

Touch the Options button in the Round list screen, you can delete the selected list.




Turn the bezel to the right to enter the setup menu.


Turn the bezel to the right to return main menu.



You can scroll up and down swipe.

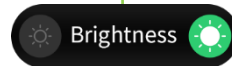


Set screen brightness to Normal or Bright

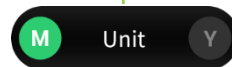


Set distance unit to meter and yard




View a brief description

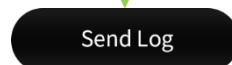

Send Golf NAVI log file.

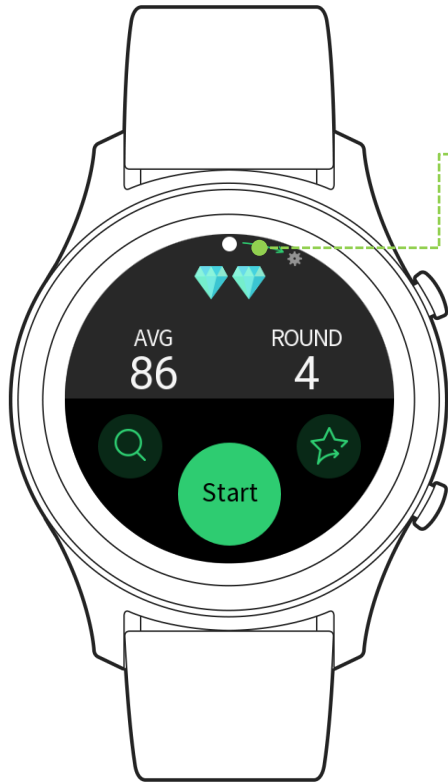


1

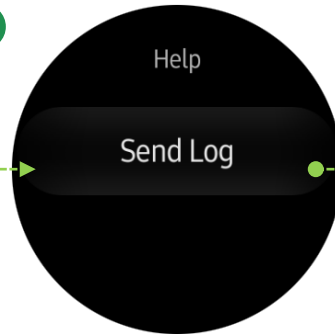

Enter the setup menu and select the log transfer menu.

2

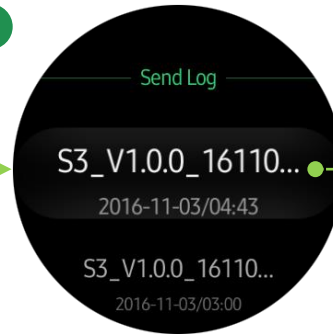

If you select a log from the list of logs displayed chronological order, The log file will be transferred.

3



**Internet connection is required because sending via online.**



It is a function to send the Golf Navi usage record to the developer to solve the error phenomenon.


Once you have completed the log transfer, please contact us to make a quick improvement.

E-mail : [info.golfnavi@gmail.com](mailto:info.golfnavi@gmail.com)

Tell : 070-7019-9017

## 02 How to Select Golf club



Find Nearby Golf clubs

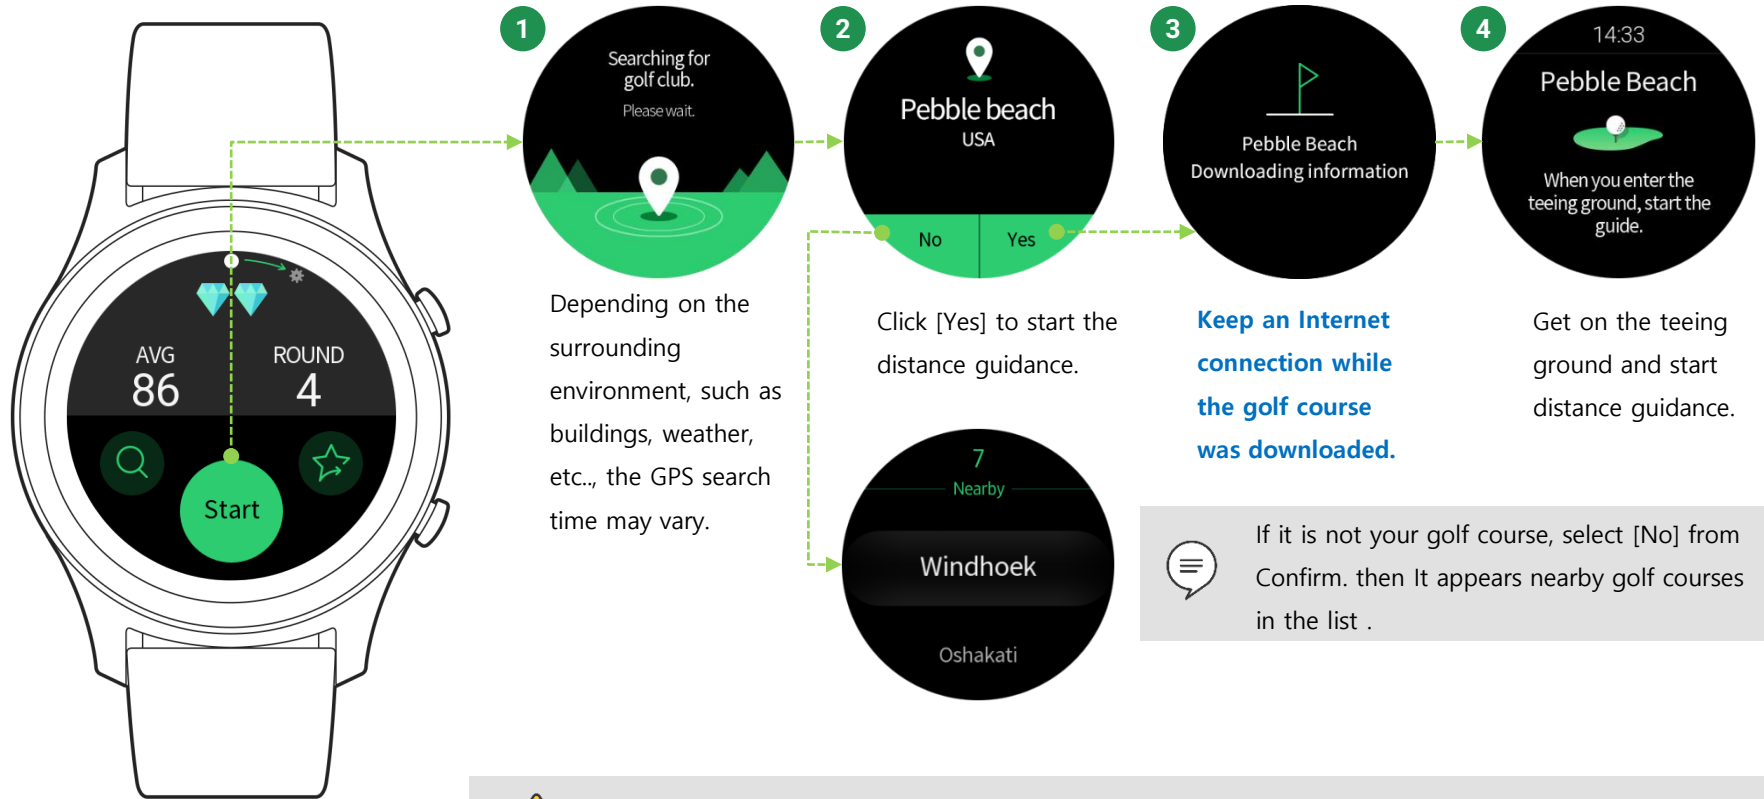



**It is a function that uses GPS. You can not receive GPS indoors, please use it outdoors.**



# 02 How to Select Golf club

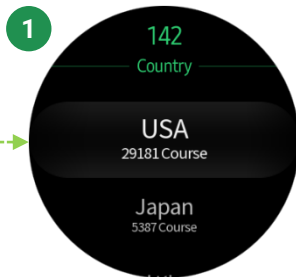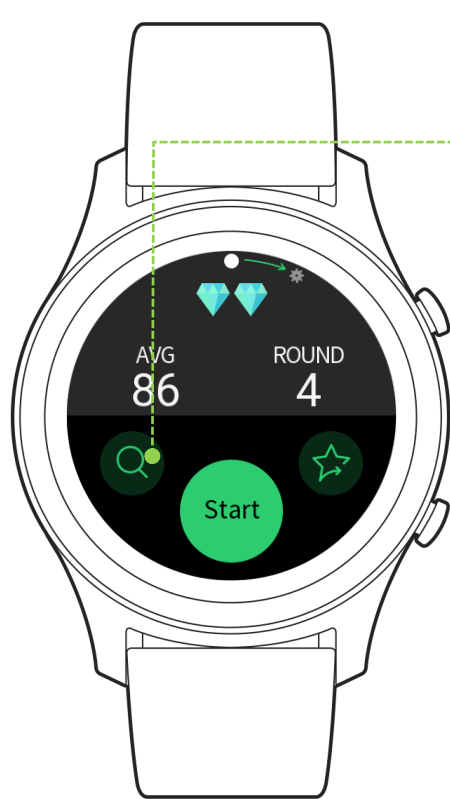

Choose your country, state, city and golf club.

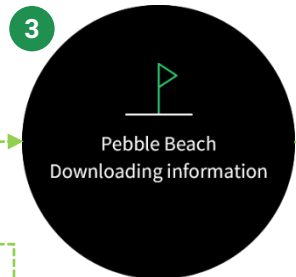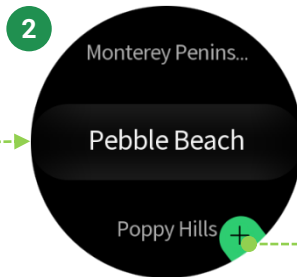


Keep an Internet connection while the golf course was downloaded.




Get on the teeing ground and start distance guidance.



You can just press  to save. You do not need internet connection if you use the stored golf course

# 02 How to Select Golf club

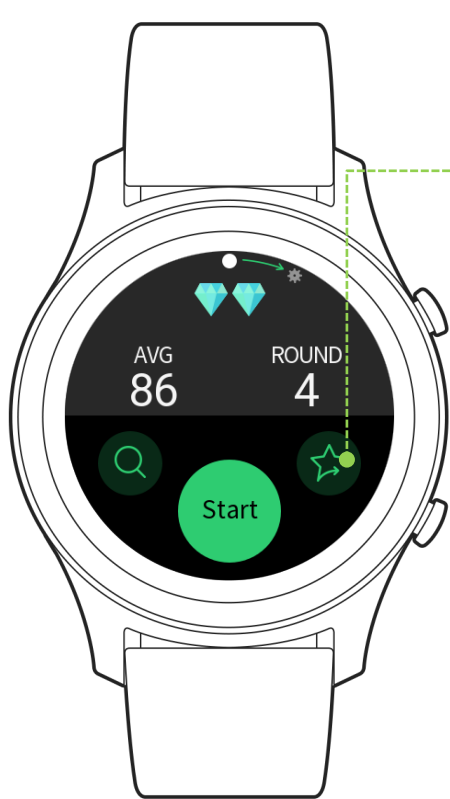


Choose your saved club.




Find the current location of GPS users.




Get on the teeing ground and start distance guidance.

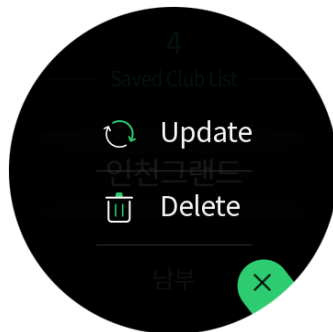

You can update or delete the stored golf course by pressing the button 

# 02 How to Select Golf club

Continue Round

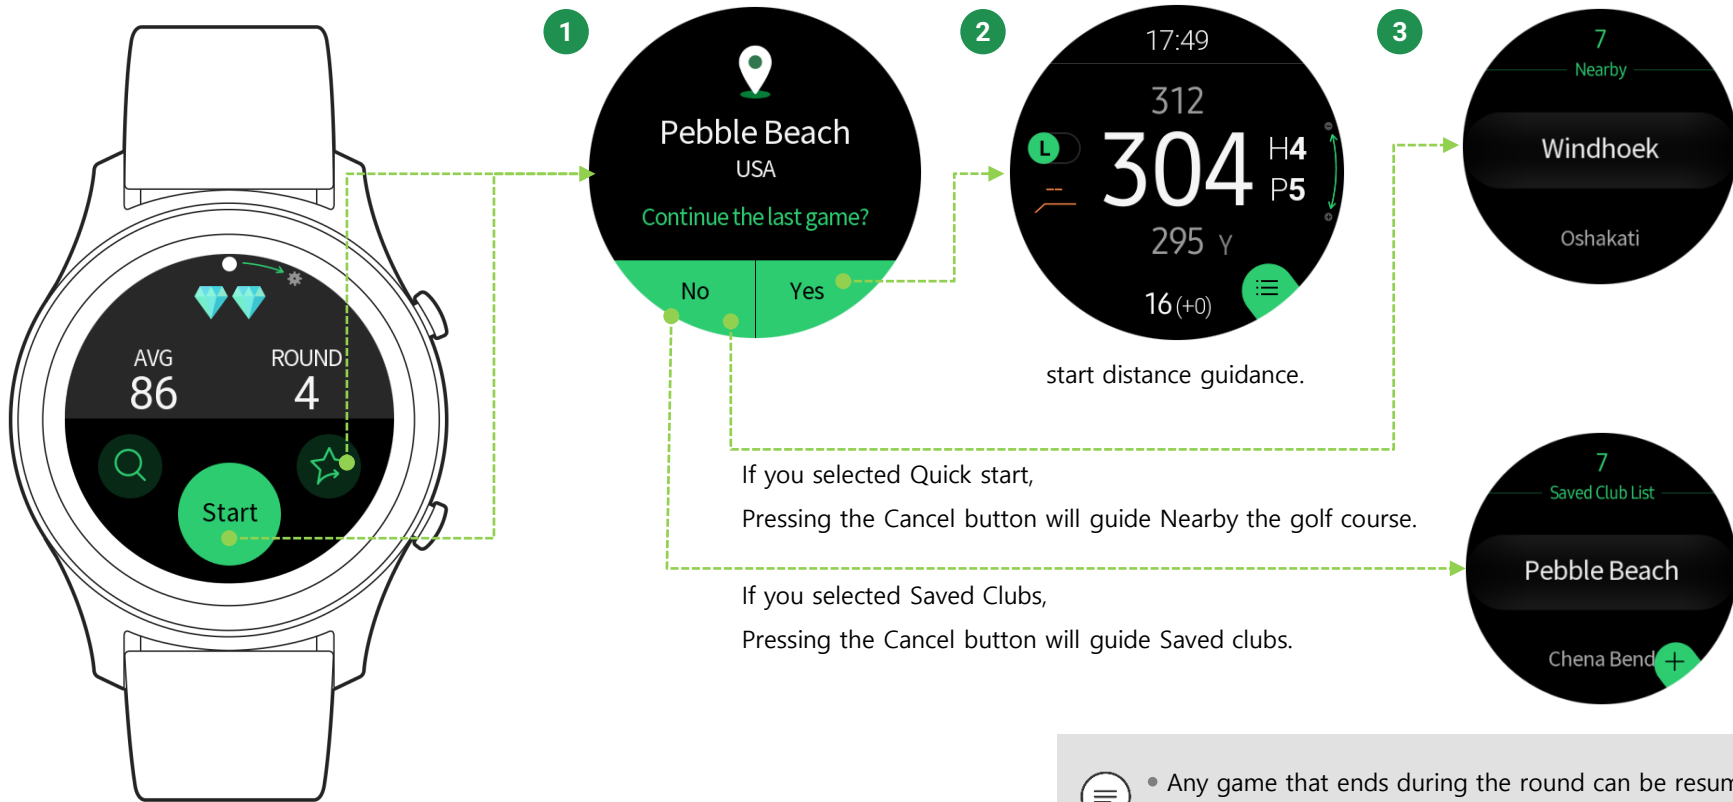

If you selected Quick start,  
Pressing the Cancel button will guide Nearby the golf course.


If you selected Saved Clubs,  
Pressing the Cancel button will guide Saved clubs.



- Any game that ends during the round can be resumed.
- The recovery is only available on the same day.


# 03 Screen description

Screen description

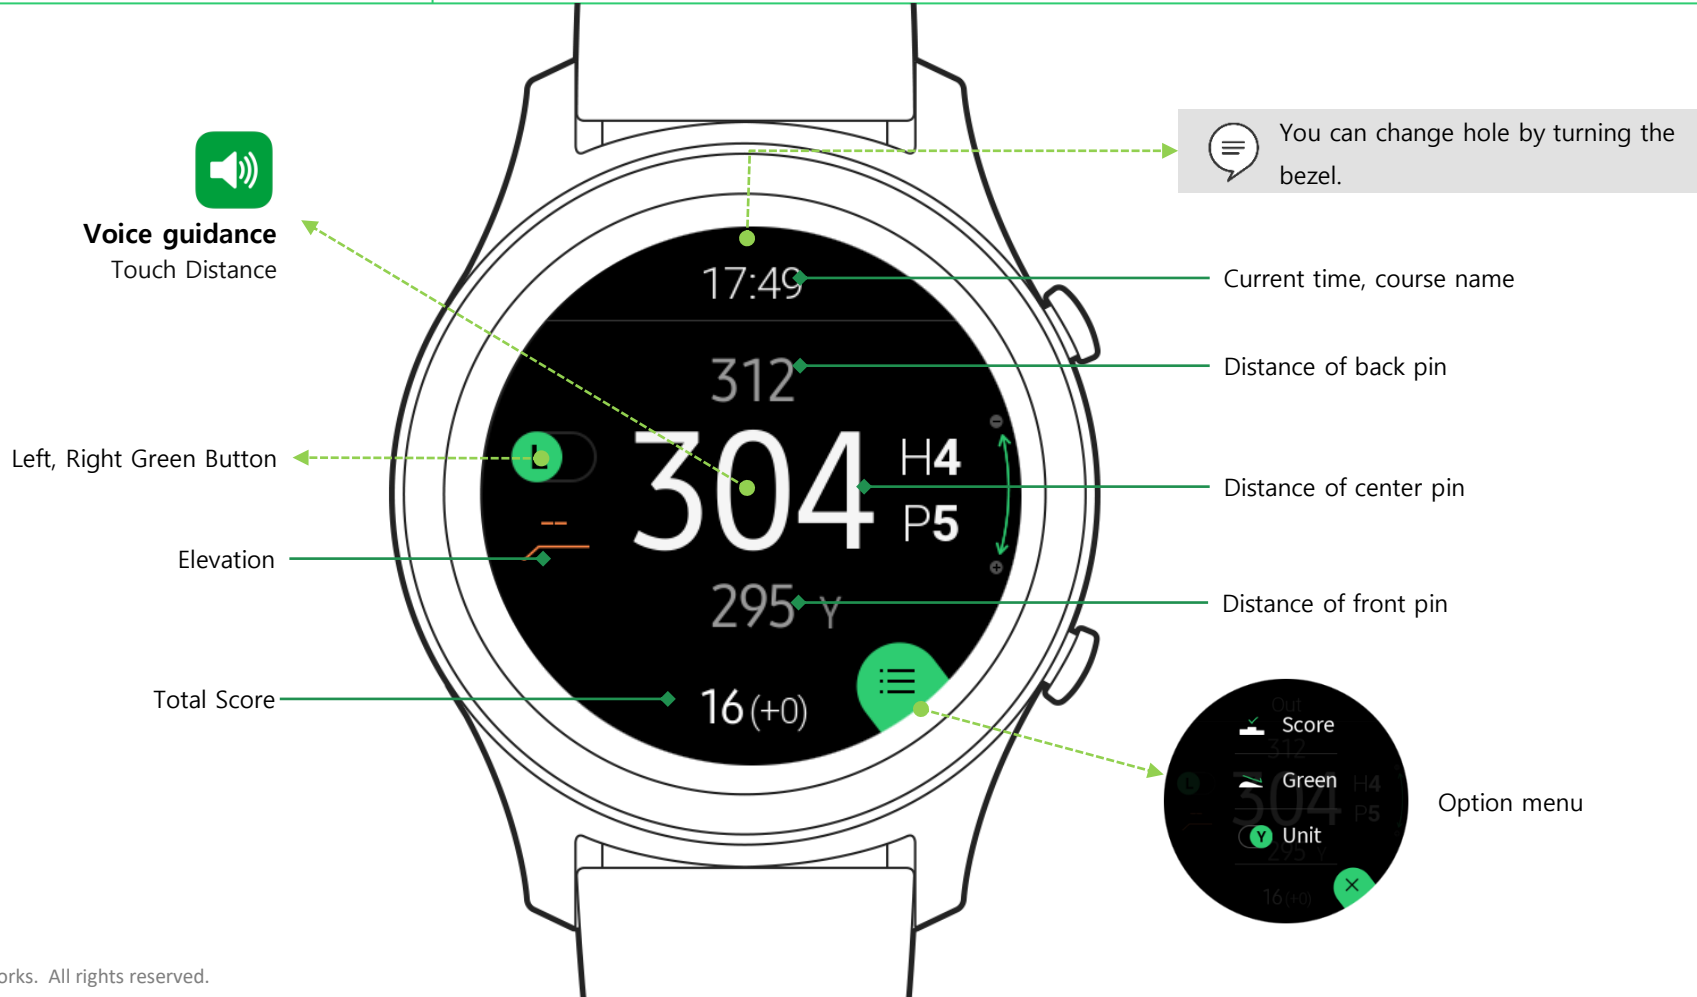

## 03 Screen description

Change hole

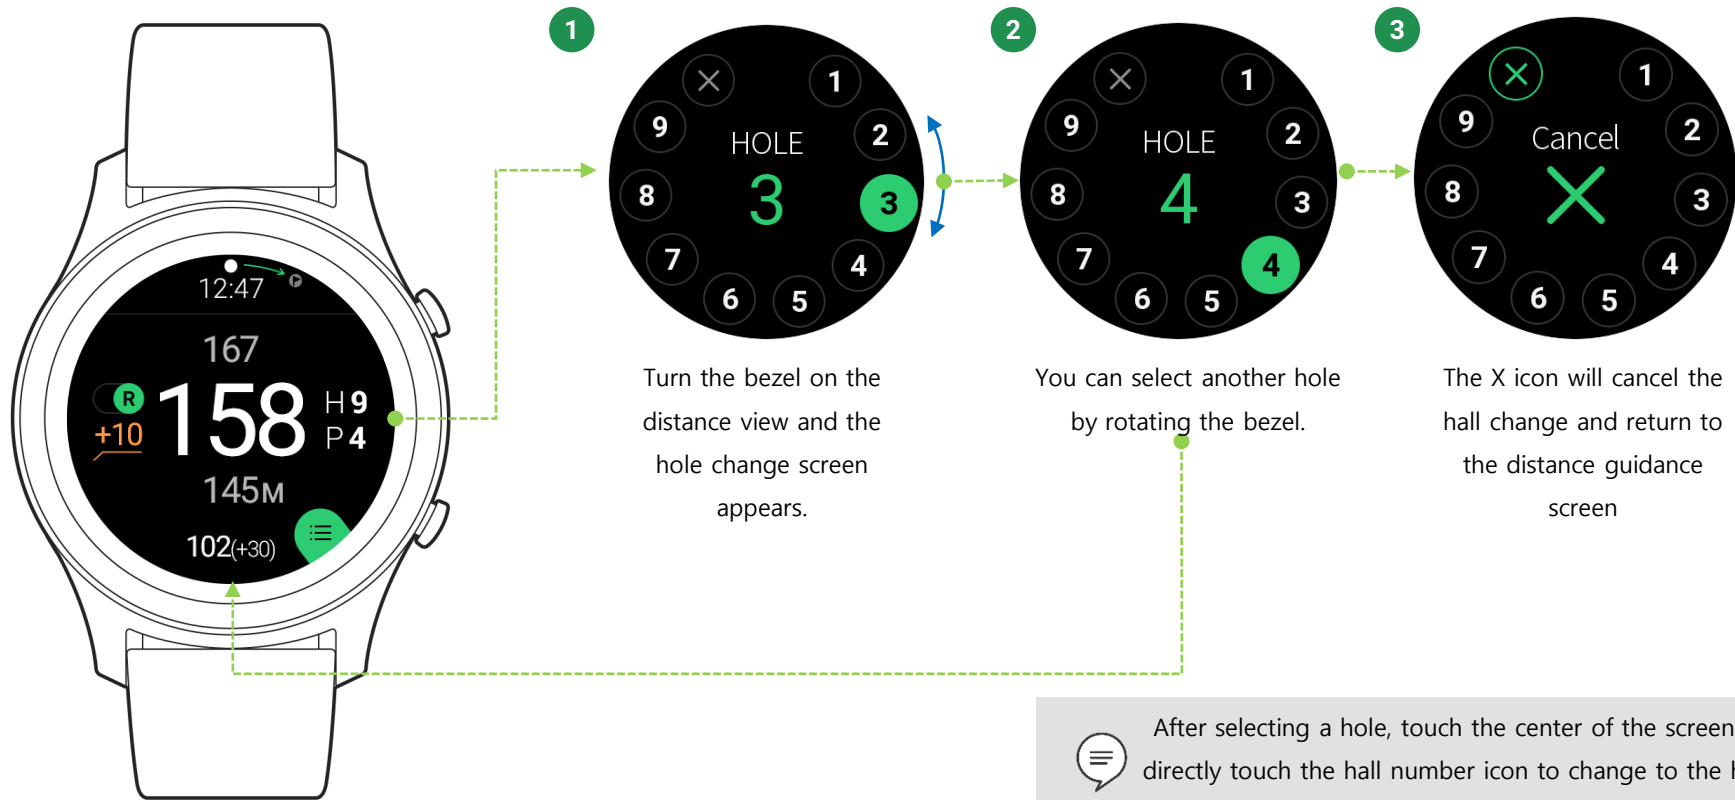

Turn the bezel on the distance view and the hole change screen appears.

You can select another hole by rotating the bezel.


The X icon will cancel the hall change and return to the distance guidance screen



After selecting a hole, touch the center of the screen or directly touch the hall number icon to change to the hole and start the distance guidance.

# 03 Screen description


## Option menu1 – Input score

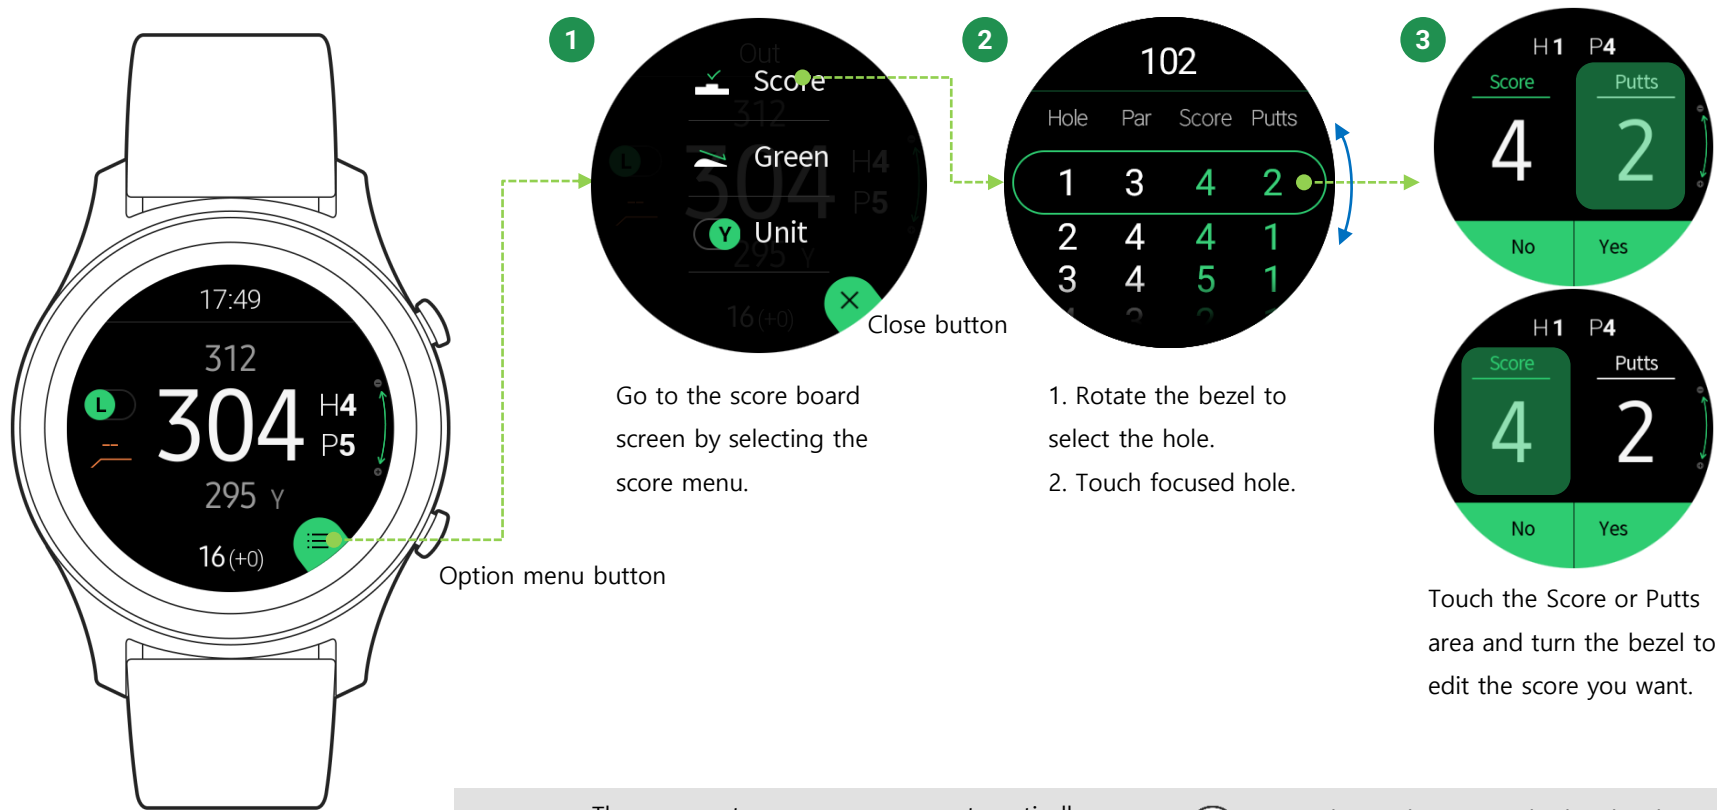

The score entry screen appears automatically for every hole.



Press the OK button to display the distance guide screen.

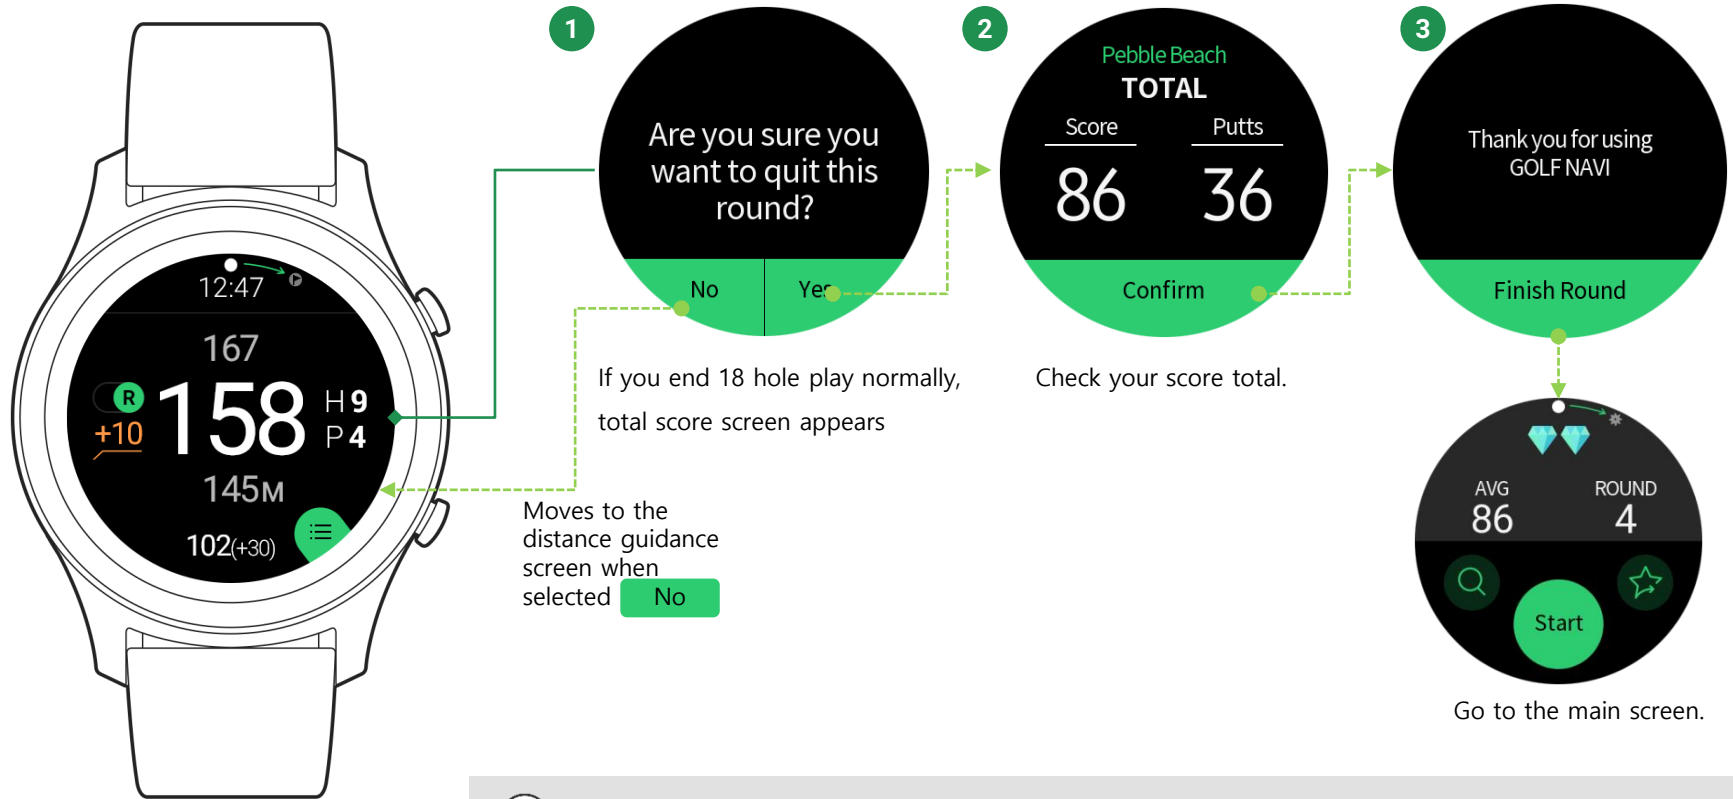

You can also end round immediately by pressing the cancel motion or back key on the street guidance screen during play

**Q Can I use GOLF NAVI without internet from overseas?****A** You can use the GOLF NAVI without internet by using the SAVED CLUB in main menu.

1. First, please save your golf course.  
main menu -> search -> select your course -> option -> save
2. Select the golf course from the saved golf course.
3. You can use the GOLF NAVI without internet

**Q I can not find the golf course. How long do you have to wait?**

- A**
1. Keep your gear S3's the Internet (3G, LTE, wifi) connection.
  2. It is a function that uses GPS. You can not receive GPS indoors, please use it outdoors.

**Q Can not find golf club in Nearby golf club or search golf club****A** Please email [info.golf\\_navi@gmail.com](mailto:info.golf_navi@gmail.com) with your golf club name, url and more. I will register golf course immediately.**Q Unable to install app.**

- A**
1. Please re-install gear S3 and phone after rebooting.
  2. If the same phenomenon repeats, please reset Gear S3 and clear the cache of Samsung Gear app of the connected phone.
  3. Connect the gear S3 and the phone with Bluetooth. Then reinstall the Golf Navi App.

**Reset of gear S3 will erase data such as photos or installation apps. Please backup important information in advance.**





---

Site. [www.phigolf.com](http://www.phigolf.com)  
Tel. 070-7019-9017  
e-mail. [Info.golfnavi@gmail.com](mailto:Info.golfnavi@gmail.com)

---